

The A26 Tipping Rain Gauge is a standalone device with independent solar power.



Installation Instructions

1. Gently unlock the top piece of the rain gauge by turning it in an anti-clockwise direction. Cut the cable tie on the tipping buckets so they can move freely. Lock the top of the rain gauge back into place by turning in a clockwise direction.
2. Proceed to level the rain gauge using the spirit level on its base.
3. When installing the rain gauge, ensure that the solar panel is facing north.

